


Kill Switch Wiring

Kohler Engines Baja Team



Disconnect the two wires from the switch at the Carburetor

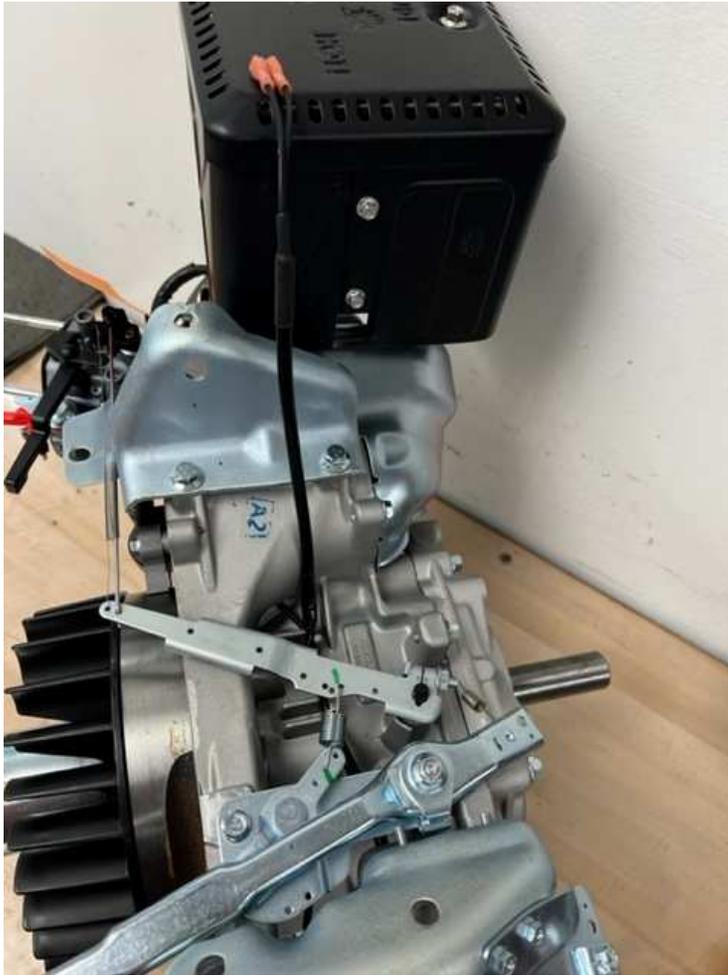

Pull wires from the carburetor to the back of the engine carefully

Connect the two wires to the two required Normally open Kill Switches and wire them in parallel





With this modification, the Red lever will not shutdown engine via spark but it will turn off fuel flow to the carburetor.